


MEASURING A RECESS SIZE

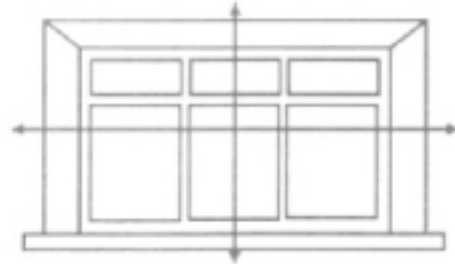

MEASURING AN EXACT SIZE

Wooden Venetian Blinds

How to measure for your wooden venetian blind - recess size (wall to wall measurement)

1. Always use a metal tape measure.
2. Take measurements in millimeters.
3. Specify width first and then drop
4. Measure the window recess horizontally in 3 places and take the smallest measurement.
5. Measure the drop, from the top of the window frame down to the windowsill, in 3 places. Use the smallest measurement.
6. We will make the necessary adjustment for the brackets so your blinds are just touching the windowsill.

Exact Size

If you want a blind to fit outside a window recess, please provide us with the exact width and drop dimensions for the blind. This is the width and drop of the area that you'd like the blind to cover.

Aluminium Venetian Blinds

How to measure your Aluminium Venetian blind - recess size (wall to wall measurement)

1. Always use a metal tape measure.
2. Take measurements in millimeters.
3. Specify width first and then drop.
4. Measure the window recess horizontally in 3 places and take the smallest

measurement.

5. Measure the drop, from the top of the window frame down to the windowsill, in 3 places. Use the smallest measurement.

6. We will make the necessary adjustment for the brackets so your blinds are just touching the windowsill.

Exact Size

If you want a blind to fit outside a window recess, please provide us with the exact width and drop dimensions for the blind. This is the width and drop of the area that you'd like the blind to cover.

Roller Blinds

How to measure your Roller blind - recess size (wall to wall measurement)

1. Always use a metal tape measure.
2. Take measurements in millimeters.
3. Specify width first and then drop.
4. Measure the window recess horizontally in 3 places and take the smallest measurement.
5. Measure the drop, from the top of the window frame down to the windowsill, in 3 places. Use the smallest measurement.
6. We will make the necessary adjustment for the brackets so your blinds are just touching the windowsill.

Exact Size

If you want a blind to fit outside a window recess, please provide us with the exact width and drop dimensions for the blind. This is the width and drop of the area that you'd like the blind to cover.

Louvre Blinds & Durashade Vertical Blinds

How to measure your Vertical blind - recess size (wall to wall measurement)

1. Always use a metal tape measure.
2. Take measurements in millimeters.
3. Specify width first and then drop.

4. Measure the window recess horizontally in 3 places and take the smallest measurement.
5. Measure the drop, from the top of the window frame down to the windowsill, in 3 places. Use the smallest measurement.
6. We will make the necessary adjustment for the brackets so your blinds are just touching the windowsill.

Exact Size

If you want a blind to fit outside a window recess, please provide us with the exact width and drop dimensions for the blind. This is the width and drop of the area that you'd like the blind to cover.

Roof Blinds

Measuring for your roof blind is easy - most of the time you won't even need a tape measure. All you need to do is open up your window, and as you swing it you'll see a small metal patch on the top. This has the brand name of your window and a code. This will differ depending on the make of your window.

Velux

There are a number of letters and digits on the Velux plate, but you're only interested in the first six or seven. These are split into two sets. The first of these sets will be three letters long, for example "GGU", and is your "Window Type" code. Next to that code will be another one which is three or four characters long, and will look like "C01" or "PK35". This is the "Size" code. Simply select these codes on our website when you are filling out your order.

Fakro

On a Fakro plate you will see two numbers divided by a slash or an "x" like this: 78/98 or 78x98. These are the dimensions of your window in centimetres - the first number is the width, and the second number is the height.

Rooflite

Rooflite windows have one short code on the sash which is three characters long. It starts and ends with a letter, with a number in between, such as "C2A". When you are purchasing your blind, enter this code when you are prompted to choose your side.

Handy Hints

- **Please take care with your measurements.** We will produce your custom-made blinds to the sizes you provide. We do not take responsibility for incorrect measurements.
- Watch out for things like **handles, catches, tiles, metal window frames, dado rails and skirting boards** when deciding how to fit your blinds. You will need **at least 10cm of recess** from where your handles protrude if fixing to the lintel.
- When ordering from our site, **make sure you choose Recess or Exact accordingly**, depending on the type of measure you have made.

Converting Sizes

1. To convert **centimetres into millimetres**, multiply by 10. eg 127.3cm =
 $127.3 \times 10 = 1273\text{mm}$
2. To convert **inches into millimetres**, multiply by 25.4. eg 53 $\frac{1}{4}$ " inches =
 $53.25 \times 25.4 = 1352\text{mm}$